
INSTALLATION:

Rigid assembled mat usually requires screw fixing. Floor surfaces must be level. If fixing is required, the infill can be lifted at an edge to allow a screw fix, after which the infill can be replaced. Pressure sensitive adhesive will not require re-application. Optionally, velcro strips may be used to hold mat in position for easy removal for off-site cleaning & replacement.

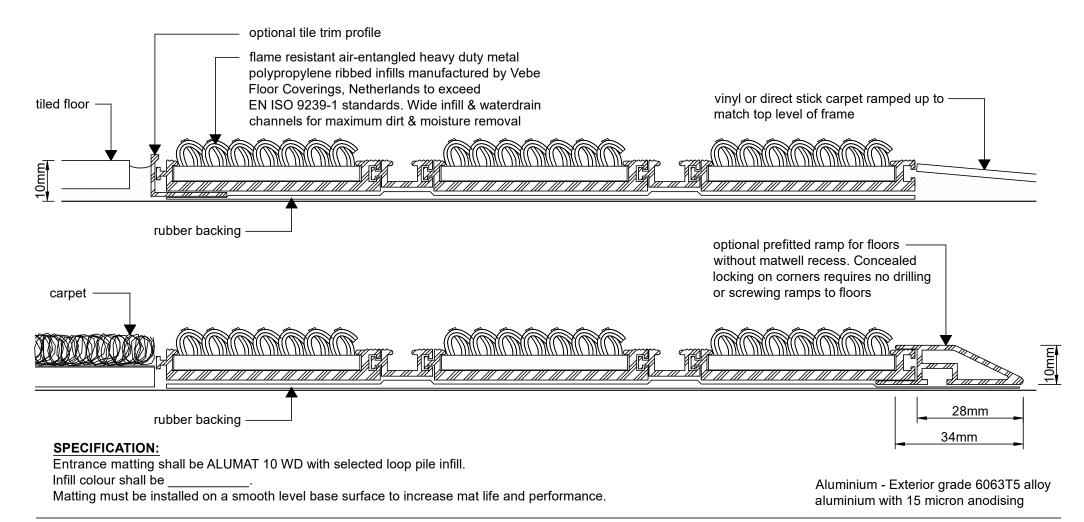



ALUMAT FLOORING SOLUTIONS
P.O. Box 89 018, Torbay, Auckland 0742
Ph.: 09 473-1602 Fax: 09 473-8406
Email: info@clumet.co.pz. Web: clumet

E-mail: info@alumat.co.nz Web: alumat.co.nz

ALUMAT 10 WD

INSTALLATION DETAILS

Revision: 1 Scale: 1:1